

# MESSAGES

## Viewing Messages

Messages that you receive are viewed in the Inbox. Messages are stored on the MDT until deleted.

Press CLR  to return to the main screen.

1. From the main screen, press .
2. Turn the knob to scroll through your messages.

Alternately, press  and  to page up/ page down.

Message priority is shown after the message title: [N]: normal, [L]: low, [H]: high



3. To read the full message, press the knob.

**OR**

Press  to delete the currently selected message.

## Sending Messages



Message to send: 4 / 12  
\* Arrived

The message screen shows your canned and status message options, and provides tools to write free-form messages

### Sending Canned and Status Messages

1. From the main screen, press .
2. Turn the knob to scroll through the canned message options. Status messages are indicated with a \*.
3. Press the knob to send the selected message.
4. Alternately, to quickly send the first or second message in the list, press

 or 

### Sending Free-Form Messages

1. From the main screen, press .
2. In the Message screen, press .
3. Write the message using the keypad.
4. Press  to change message priority (if available) between high, low, and normal.
5. Press the knob to send the message.

### Using the Keypad to Write Messages

Press a keypad button repeatedly to toggle through the characters it shows. For example, keypad button 3 writes D, E, F, and 3.



The 0 keypad button writes 0 and symbols (@, ., ., ? = ; : \$ % \* ( ) )



Press ENT to toggle between numbers and letters.



Rotate the knob clockwise to advance a space, counter-clockwise to go back a space.

